

NOTICE OF FUNCTION CHANGE (SD1 firmware version 1.04)

The following new functions were added to the SD1 camera with the new Firmware update (Firmware version 1.04).

1. Languages to be displayed in Set Up menu are added

7 languages have been added which can be accessed from [Language/言語] in the Set Up menu.

Added languages:

Dutch (Nederlands)	Danish (Dansk)	Norwegian (Norsk)
Polish (Polski)	Swedish (Svenska)	Finnish (Suomi)
Portuguese (Português)		

2. Enables the use of “SIGMA Capture Pro” camera control software.

“SIGMA Capture Pro” camera control software, which allows remote control photography and the ability to change camera settings from computers, is enabled.

Additionally, [USB Mode] is added to [Camera Settings] in the Set Up menu. Please switch the USB Mode depending on purposes before connecting the camera and computers using USB cables.

USB Mode

Mass Storage (Default)	Please select this mode to transfer recorded images in the card from the camera to computers. (For further information, please refer P.126 in User’s Manual.)
Camera Control	Please select this mode to control the camera using “SIGMA Capture Pro”. (For further information on how to use “SIGMA Capture Pro”, please click on Help in “SIGMA Capture Pro”.)

Notice!!

USB Mode cannot be switched if there is no card in the camera.

3. Playback Menu is improved.

The following features in [▶ Playback Menu] only used to be active while viewing images. Now, they can be activated without viewing images.

- [All] in [Delete] (P.97)
- [Lock All] and [Unlock All] in [Lock] (P.98)
- [Mark All] and [Unmark All] in [Mark] (P.100)

SUPPLEMENTARY NOTE FOR USER’S MANUAL

When Function Display (P.35) is displayed while the [LCD Off] (P.112) option in [Camera Settings] is set to [Off], power does not turn off even if the auto power off setting is on. In order to prevent battery drain, when possible, please set the [LCD Off] option to anything but [Off].

CORRECTION NOTICE

The text on P.24 for information regarding [MOUNTING AND REMOVING THE LENS] is currently as follows: “Align the red mark on the camera’s mount with the red dot on the lens”. However, the mark on the camera’s mount is actually white in color and not red.