

NOTICE OF FUNCTION CHANGE (SD1 firmware version 1.09)

The following new functions were added to the SD1 camera with the new Firmware update (Firmware version 1.09).

1. ISO SENSITIVITY STEP (Ver.1.09)

By default, the ISO sensitivity step setting is 1 EV. However, it is possible to select 1/3 EV.

It is possible to set the ISO sensitivity from [📷 Capture Settings] → [ISO Sensitivity Step].

| | |
|----------------|---|
| 1 EV (Default) | It is possible to set the ISO sensitivity step 1EV. |
| 1/3 EV | It is possible to set the ISO sensitivity step 1/3EV. |

When the 1/3 EV is selected, the following ISO sensitivity can be set.

| | | | | |
|----------|----------|----------|----------|----------|
| ISO AUTO | ISO 100 | ISO 125 | ISO 160 | ISO 200 |
| ISO 250 | ISO 320 | ISO 400 | ISO 500 | ISO 640 |
| ISO 800 | ISO 1000 | ISO 1250 | ISO 1600 | ISO 2000 |
| ISO 2500 | ISO 3200 | ISO 4000 | ISO 5000 | ISO 6400 |

2. ISO AUTO RANGE (Ver.1.09)

It is possible to set the Lower limit and Upper limit of the ISO Sensitivity in ISO Auto mode.

1. It is possible to set the ISO Auto Range from [📷 Capture Settings] → [ISO Auto Range].

2. Set [Lower limit] and [Upper limit].

Lower limit

| | | | | | |
|-------------------|---------|---------|---------|----------|----------|
| ISO 100 (Default) | ISO 200 | ISO 400 | ISO 800 | ISO 1600 | ISO 3200 |
|-------------------|---------|---------|---------|----------|----------|

Upper limit

| | | | | | |
|---------|---------|-------------------|----------|----------|----------|
| ISO 200 | ISO 400 | ISO 800 (Default) | ISO 1600 | ISO 3200 | ISO 6400 |
|---------|---------|-------------------|----------|----------|----------|

Caution !!

It is not possible to set the same value to the Lower limit and Upper limit and reversed value.

3. Adds “FOV Classic Blue” to Color mode. (Ver.1.09)

“FOV Classic Blue” mode [Fov B.] which renders impressive blue sky, with the expression of rich blue tone is added to the Color Mode (P.69).

4. ADDITION TO THE QUICK SET MENU (Ver.1.09)

Enables the Quick Set menu items (P.37) to be changed using A-dial (🌓) or S-dial (⚙️).

After pressing (↔️) button of the item you wish to change, please rotate A-dial (🌓) or S-dial (⚙️) to change the setting.

5. Languages to be displayed in Set Up menu are added

7 languages have been added which can be accessed from [Language/言語] in the Set Up menu.

Added languages:

| | | |
|------------------------|-------------------|-------------------|
| Dutch (Nederlands) | Danish (Dansk) | Norwegian (Norsk) |
| Polish (Polski) | Swedish (Svenska) | Finnish (Suomi) |
| Portuguese (Português) | | |

6. Enables the use of “SIGMA Capture Pro” camera control software.

“SIGMA Capture Pro” camera control software, which allows remote control photography and the ability to change camera settings from computers, is enabled.

Additionally, [USB Mode] is added to [📷 Camera Settings] in the Set Up menu. Please switch the USB Mode depending on purposes before connecting the camera and computers using USB cables.

USB Mode

| | |
|------------------------|--|
| Mass Storage (Default) | Please select this mode to transfer recorded images in the card from the camera to computers. (For further information, please refer P.126 in User's Manual.) |
| Camera Control | Please select this mode to control the camera using “SIGMA Capture Pro”. (For further information on how to use “SIGMA Capture Pro”, please click on Help in “SIGMA Capture Pro”.) |

Notice!!

USB Mode cannot be switched if there is no card in the camera.

7. Playback Menu is improved.

The following features in [▶️ Playback Menu] only used to be active while viewing images. Now, they can be activated without viewing images.

- [All] in [Delete] (P.97)
- [Lock All] and [Unlock All] in [Lock] (P.98)
- [Mark All] and [Unmark All] in [Mark] (P.100)